


Level Module

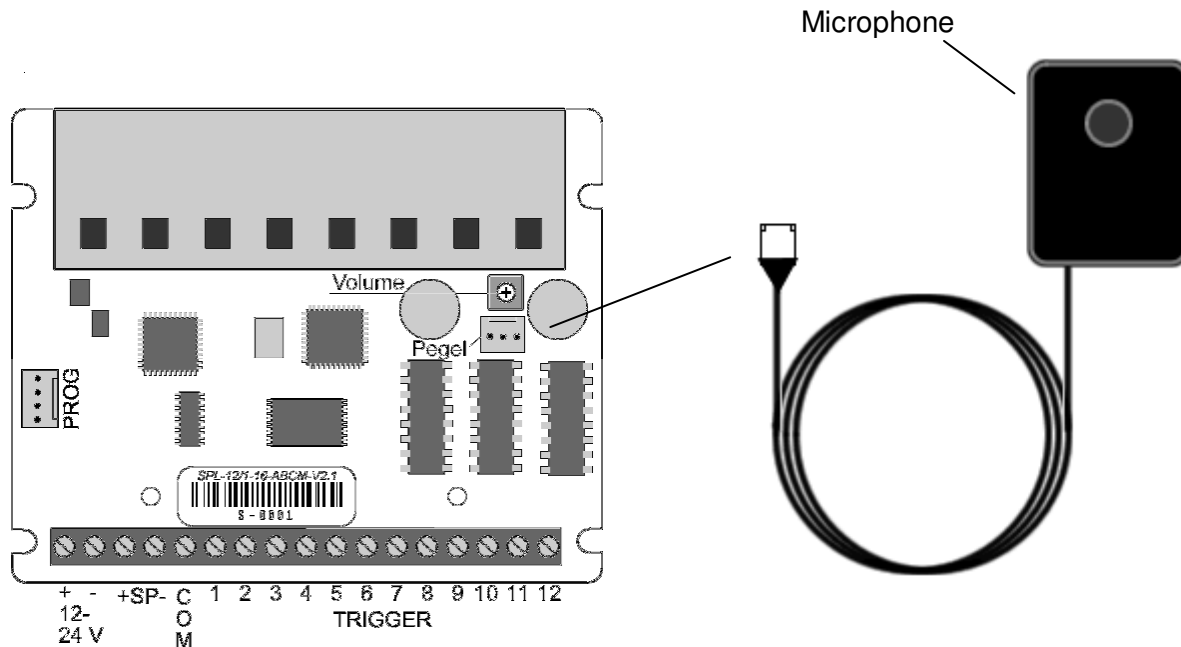

How it works:

The level module allows for an increase in the SPL 12 Voice Module's output volume as the environmental noise level requires. For this purpose the integrated microphone simply "measures" the volume of the surroundings and the output volume is then raised accordingly.

Installation:

1. Install the SPL 12 Voice Module according to the instructions.
2. Adjust the desired maximum output volume via the volume control.
3. Plug the connector of the level module into the socket intended for it. This will throttle back the output volume. In case the standard volume level does not completely satisfy you, you may additionally adjust it via the volume control.
4. Install the level module (e.g. with the included double-sided tape) as far as possible from the output speaker, so the voice module will not change the volume by reacting to your own announcements.